



Malmark

BELLCRAFTSMEN

Bell Crest Park • P.O. Box 1200 • Plumsteadville, PA 18949 • (215)766-7200 • (800) 426-3235

Instructions for Field Assembly of Bell Case Wheels and Pull Chain Loop

1. Bell Case Wheels – See opposite side of this page for details of wheel parts.
Assembly Procedure: Position RECEIVERS as shown with slots in locking tabs facing outwards toward ends of case. Locate RECEIVERS on case lid first almost touching hinges. Center the point of a small nail in the two mounting holes in each and strike lightly with a hammer. Remove nail and fasten RECEIVERS with screws supplied. Position the other two Receivers in opposite similar locations on case body and fasten likewise.



2. Pull Chain Loop – Center on side of case near end as shown. Use nail as described above in 2 holes in Loop and fasten with two screws provided. When installing wheels, assemble swivel wheels at end below LOOP.



Instructions for Installation and Removal of Bell Case Wheels and Bottom Feet

Refer to the drawings below for identification of parts after first noting their positions on the bottoms of your cases. Note that two of the wheels for each case are of the fixed type and two are of the swivel type, and that those which swivel should be installed on the end of the case at which the pull chain is located. It is recommended that, before shipping your cases by truck or air, you should remove the wheels and install the bottom feet to prevent damage to the wheels from rough handling. Removal and installation is quick, simple, and requires only the use of an ordinary screw driver.

To Install Bottom Foot or Wheel

1. Line up slot in wheel shell or in bottom foot with receiver.
2. Insert wheel or foot into channel and push in until locking tab clicks into locked position.



To Remove Wheel or Bottom Foot

1. Insert Screwdriver into slot in shell against locking tab on receiver.
2. Press down on the screw driver and pullout wheel or bottom foot.

